

# Great Room TV Cheat Sheet

To power all components ON or OFF...Use the silver “Charter” remote. Stand well back and press the “System On/Off” button (Top Left) while pointing the remote centrally towards all A/V components. All components (EXCEPT THE BLU-RAY PLAYER) should respond. For TV viewing only the silver “Charter” remote is required. It also controls the volume via the Sony receiver.

To watch a DVD/Blu-ray: power on the Sony BDP-S3700 either manually or using its own (small, black) remote. The TV will “automagically” switch to the correct HDMI-3 input. When finished remove the disc and power off. The Sony TV will again “automagically” switch back to the HDMI-2 input for cable viewing.

In the event the TV does not switch inputs automatically, use the “Input” button (Top Left) on the Sony TV (larger black) remote to select the TV’s appropriate HDMI input.

To Watch / Listen to...	Sony TV (Input) Larger Black Remote	Sony Receiver (Function) Blue Remote	Charter/Pace Cable Box Silver Remote
TV(Charter Cable) Netflix etc. (Note-1)	HDMI-2	Video 2	On
Blu-ray / DVD / CD (Sony BDP-S3700) Netflix etc. (Note-1)	HDMI-3	Video 2	*
CD (Sony Receiver)	*	DVD	*
Radio FM/AM (Sony Receiver)	*	Tuner	*
Other: e.g. Computer / Cell Phone / Game Machine. Connect via HDMI port at Left side of TV.	HDMI-1	Video 2	*
I-Tunes	TBD	TBD	*

Note-1.

Netflix, Amazon Video, Hulu, YouTube etc. can be watched using apps on the Sony TV, directly, or using the equivalent apps on the Sony Blu-ray player instead. In either case you must initiate these apps using the appropriate devices own remote control.

If using the TV – then use the Black Sony TV remote. If using the Blu-ray player then use the Blu-ray’s smaller black remote instead.

\* = Off or Do Not Care.

# Great Room TV Cheat Sheet

## **Remotes:**

- Silver “Charter”: Charter / Pace Cable box. Also used as a universal remote to control basic functions of the other devices. This remote does not control the Blu-ray player. This is intentional !!
- Large Black “Sony”: Sony TV Remote. Needed for emergency TV input selection; for Netflix and for other complex tasks.
- Small Black “Sony”: Sony Blu-ray/DVD player remote. Use when playing disks or if using the Blue-ray player’s Netflix or other app functionality.
- Blue “Sony”: Sony receiver remote. Not usually required. Can be used for changing DSP modes etc.

## **Trouble shooting:**

### *Problem:*

All devices do not power up correctly.

### *Solution:*

Using the silver “Charter” remote, press the button corresponding to the device which you need to independently power up/down. Use “Aux” for the Sony receiver. Press the red “Power” button (Top right) to toggle that components power state independently.

### *Problem:*

The Sony receiver does not respond to power up/down. There is no sound and the display is blank.

### *Solution:*

The receiver is not in standby mode – but is hard off. Manually press the power button on the receiver’s front panel (far left) to turn it on.

### *Problem:*

The Sony receiver does not display “Video 2” in it’s display and there is no sound while watching TV or DVD.

### *Solution:*

Press the receiver’s “function” button on the front panel until “Video 2” is displayed. Adjust the volume knob. If there is still no sound then ensure the optical SPDIF cable is connected between the TV optical output and the receiver’s video 2 optical input on the rear panel.